

## HKA—F2DA系列霍尔电流变送器

### (HKA—F2DA Hall-effect Current Transducer Series)


HKA—F2DA 系列霍尔电流传感器的初、次级之间是绝缘的，可用于测量交流电流。

(HKA—F2DA Series Hall-effect Current transducer between primary and secondary is insulated, can be used for the measurement of AC current)

电气参数 (Electrical characteristics)						
	型号 Type	HKA200- F2DA	HKA400- F2DA	HKA800- F2DA	HKA1000- F2DA	
I <sub>pn</sub>	额定输入电流 (AC) Rated input	200	400	800	1000	A
I <sub>pm</sub>	测量电流范围 (AC) Measuring range	300	600	1200	1500	A
R <sub>m</sub>	测量电阻 Measuring resistance	0-400				Ω
I <sub>out</sub>	输出电流 Rated output current	4~20				mA
I <sub>o</sub>	零电流失调 Zero offset current	$<4 \pm 0.1$				mA
V <sub>c</sub>	电源 Supply voltage	$+24 \pm 5\%$				V
I <sub>c</sub>	静态功耗 Current consumption	$\leq 40 + I_{out}$				mA
I <sub>ot</sub>	零点温漂 Thermal drift of I <sub>o</sub>	$\leq \pm 0.005$				mA/°C
F	带宽 Frequency bandwidth(-3 dB)	20~20000				Hz
ε <sub>G</sub>	精度 Accuracy	1				%
ε <sub>L</sub>	线性度 Linearity	1				%
Tr	响应时间	$\leq 200$				mS

	Response time		
Vd	绝缘电压 Insulation voltage	2.5	KV
Ta	工作温度 Ambient operating temperature	-40~+85	°C
Ts	储存温度 Ambient storage temperature	-40~+125	°C
M	重量 mass	240	g
	标准 Standards	EN50178\IEC61010-1\UL94-Vo\ROHS	


机械参数 Dimensions (mm)

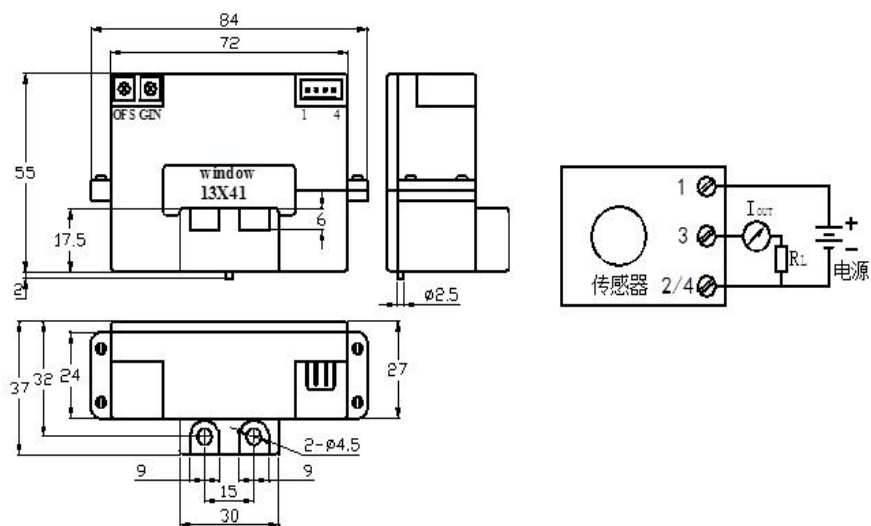

引脚说明: +: +24V; G: 电源地; 0: I<sub>out</sub>; G: 输出地  
端子标准: 连接器 MOLEX-04A 压线端子

## 线性关系 (Linear)

---

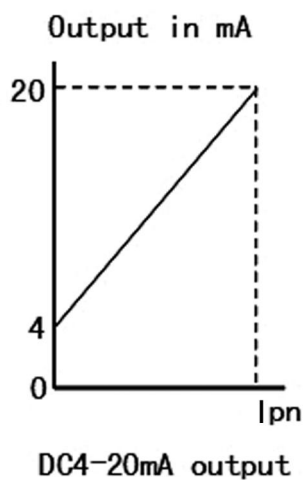

### 使用说明 Remarks

---

- 1、应用：通讯电源、不间断电源UPS、斩波器、电化学、整流、电源监测、电焊机、变频、开关电源、电池监测、电动机监测等领域。Application: communication power supply, uninterruptible power supply UPS chopper, electrochemical, rectifier, power monitoring, welding machines, inverter, switching power supply, battery monitoring, motor monitoring fields.
- 2、传感器的输出幅度可根据用户需要进行适当调节。The amplitude of the output of the sensor can be appropriately adjusted according to user needs.
- 3、可按用户需求定制不同额定输入电流和输出电压的传感器。Custom different rated input current and the output voltage of the sensor.
- 4、当待测电流从变送器穿过，即可在输出端测得电流大小。（注意：错误的接线可能导致变送器损坏）When the current to be measured is across from the transmitter can be measured at the output current size. (Note: incorrect wiring may cause transmitter damage)